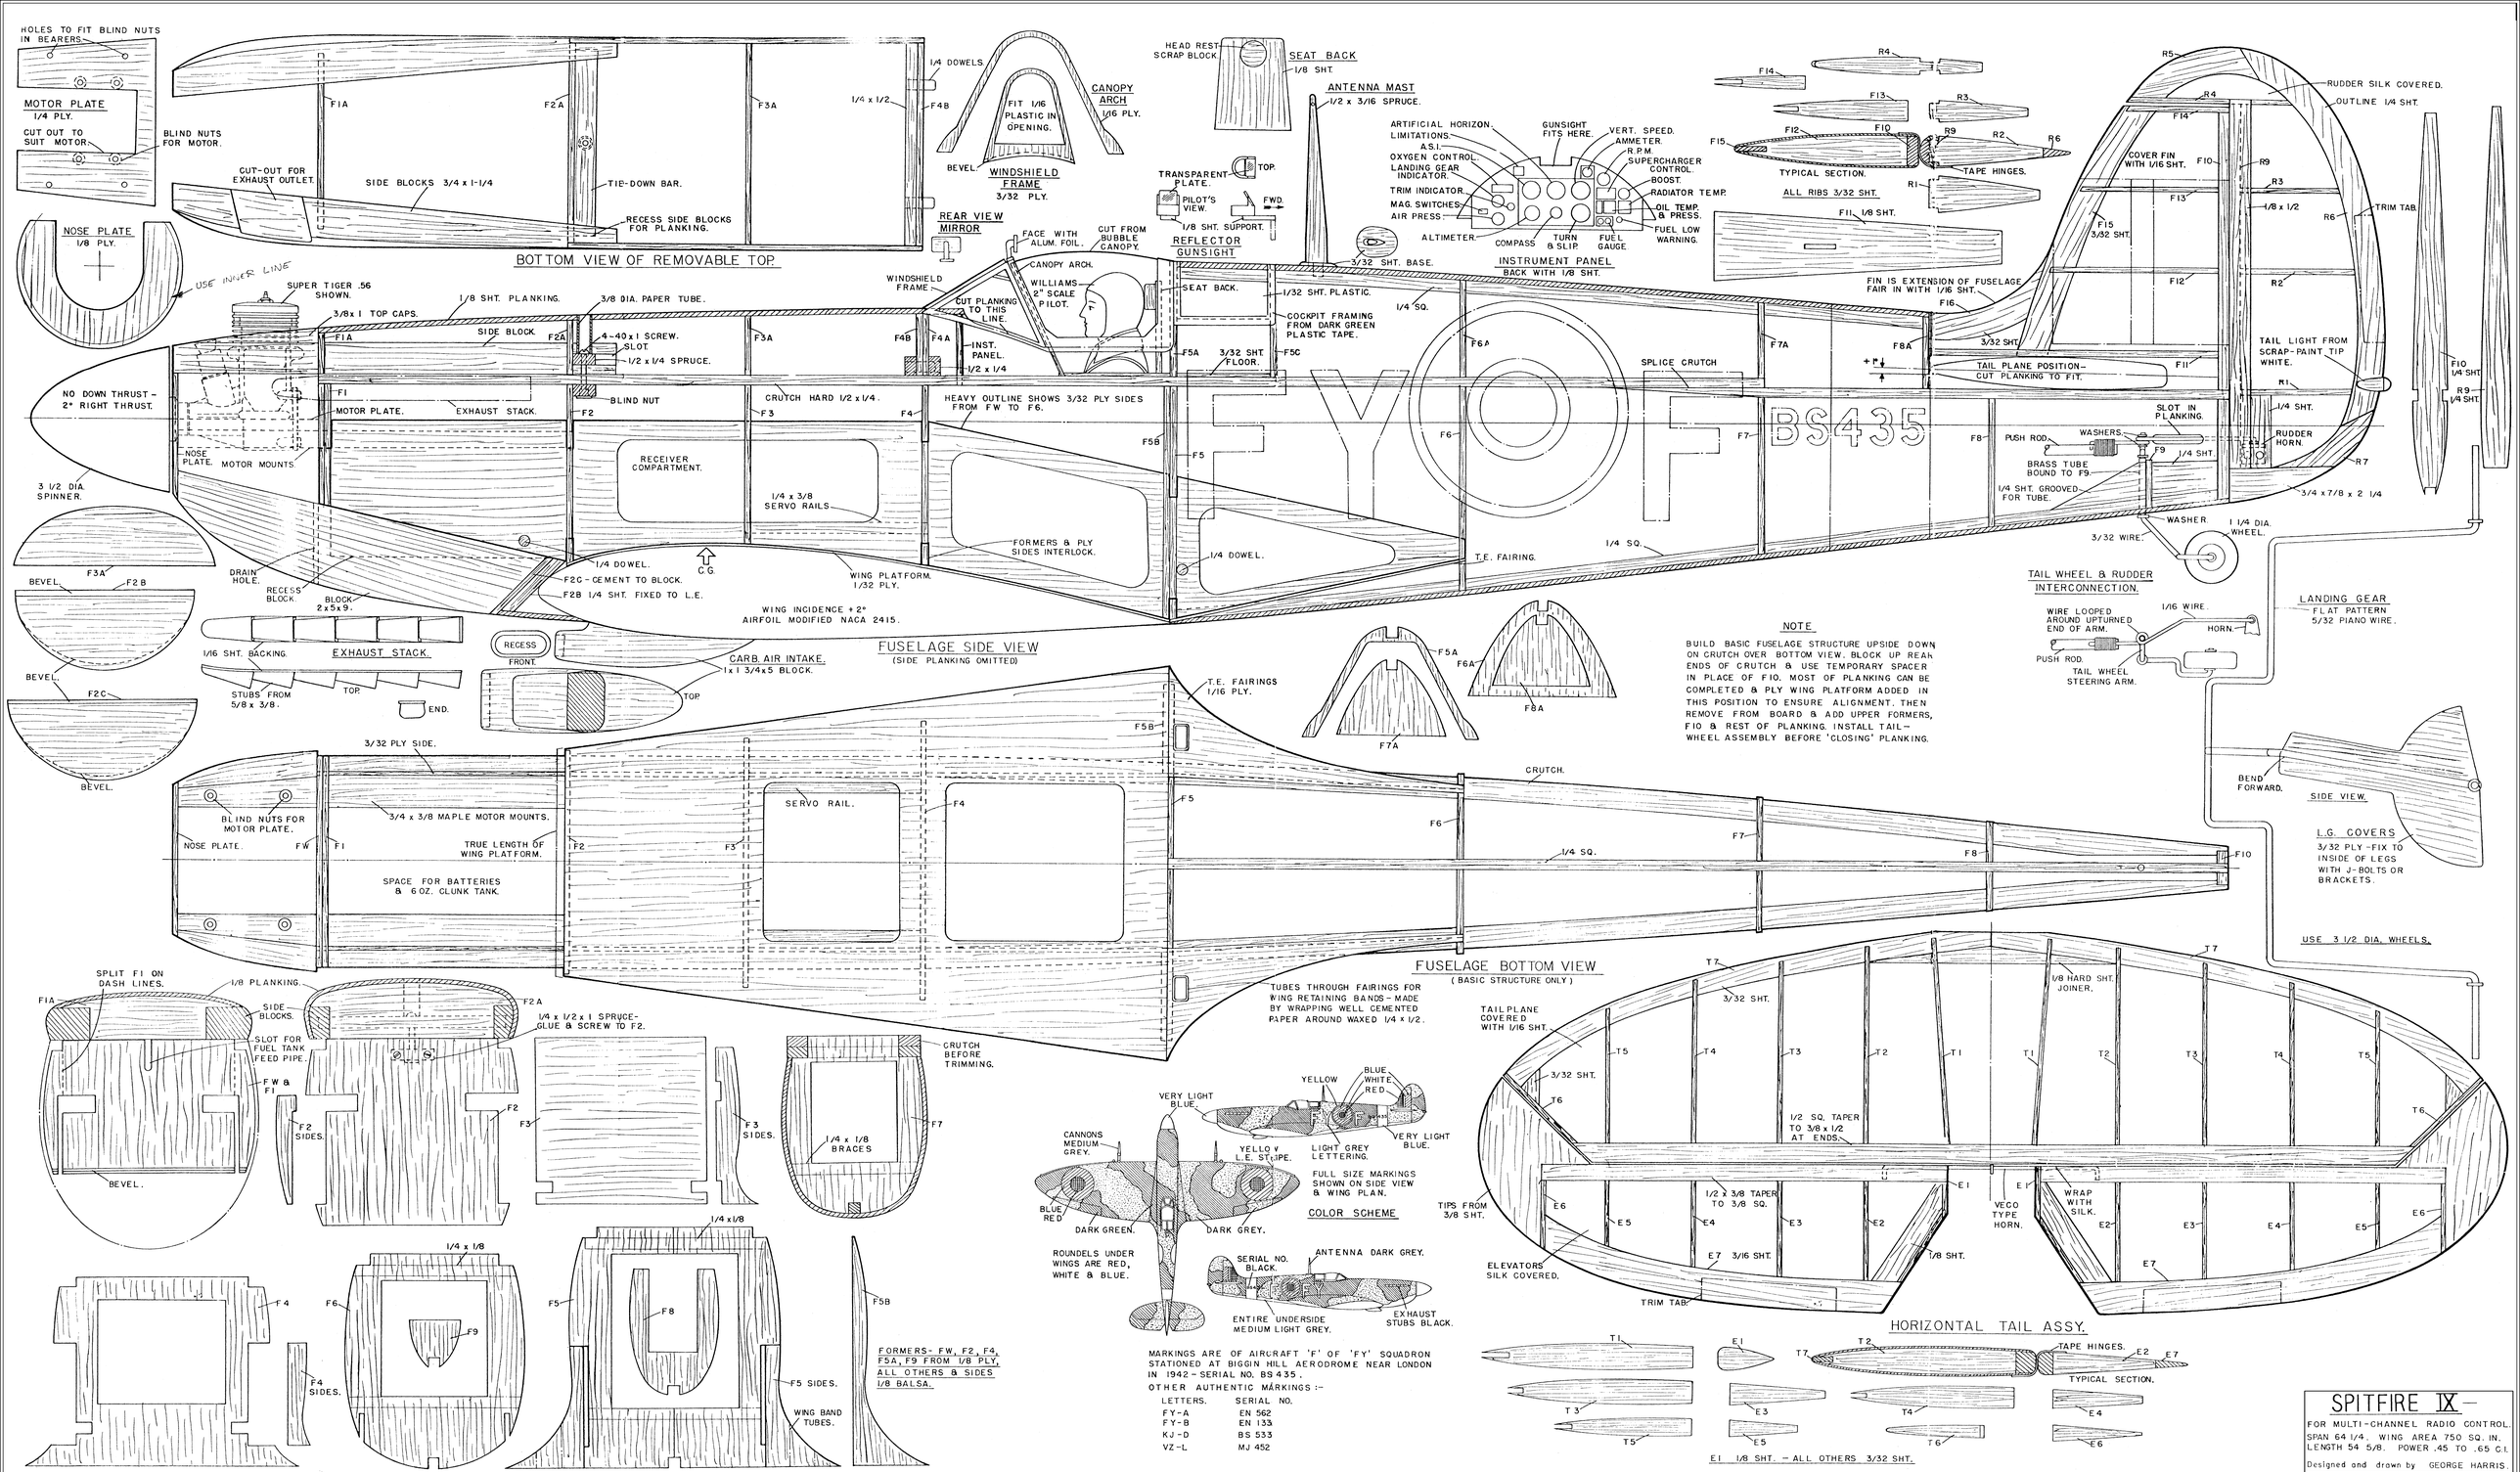

NOTE

BUILD BASIC FUSELAGE STRUCTURE UPSIDE DOWN ON CRUTCH OVER BOTTOM VIEW. BLOCK UP REAR ENDS OF CRUTCH & USE TEMPORARY SPACER IN PLACE OF F10. MOST OF PLANKING CAN BE COMPLETED & PLY WING PLATFORM ADDED IN THIS POSITION TO ENSURE ALIGNMENT. THEN REMOVE FROM BOARD & ADD UPPER FORMERS, F10 & REST OF PLANKING. INSTALL TAIL-WHEEL ASSEMBLY BEFORE 'CLOSING' PLANKING.

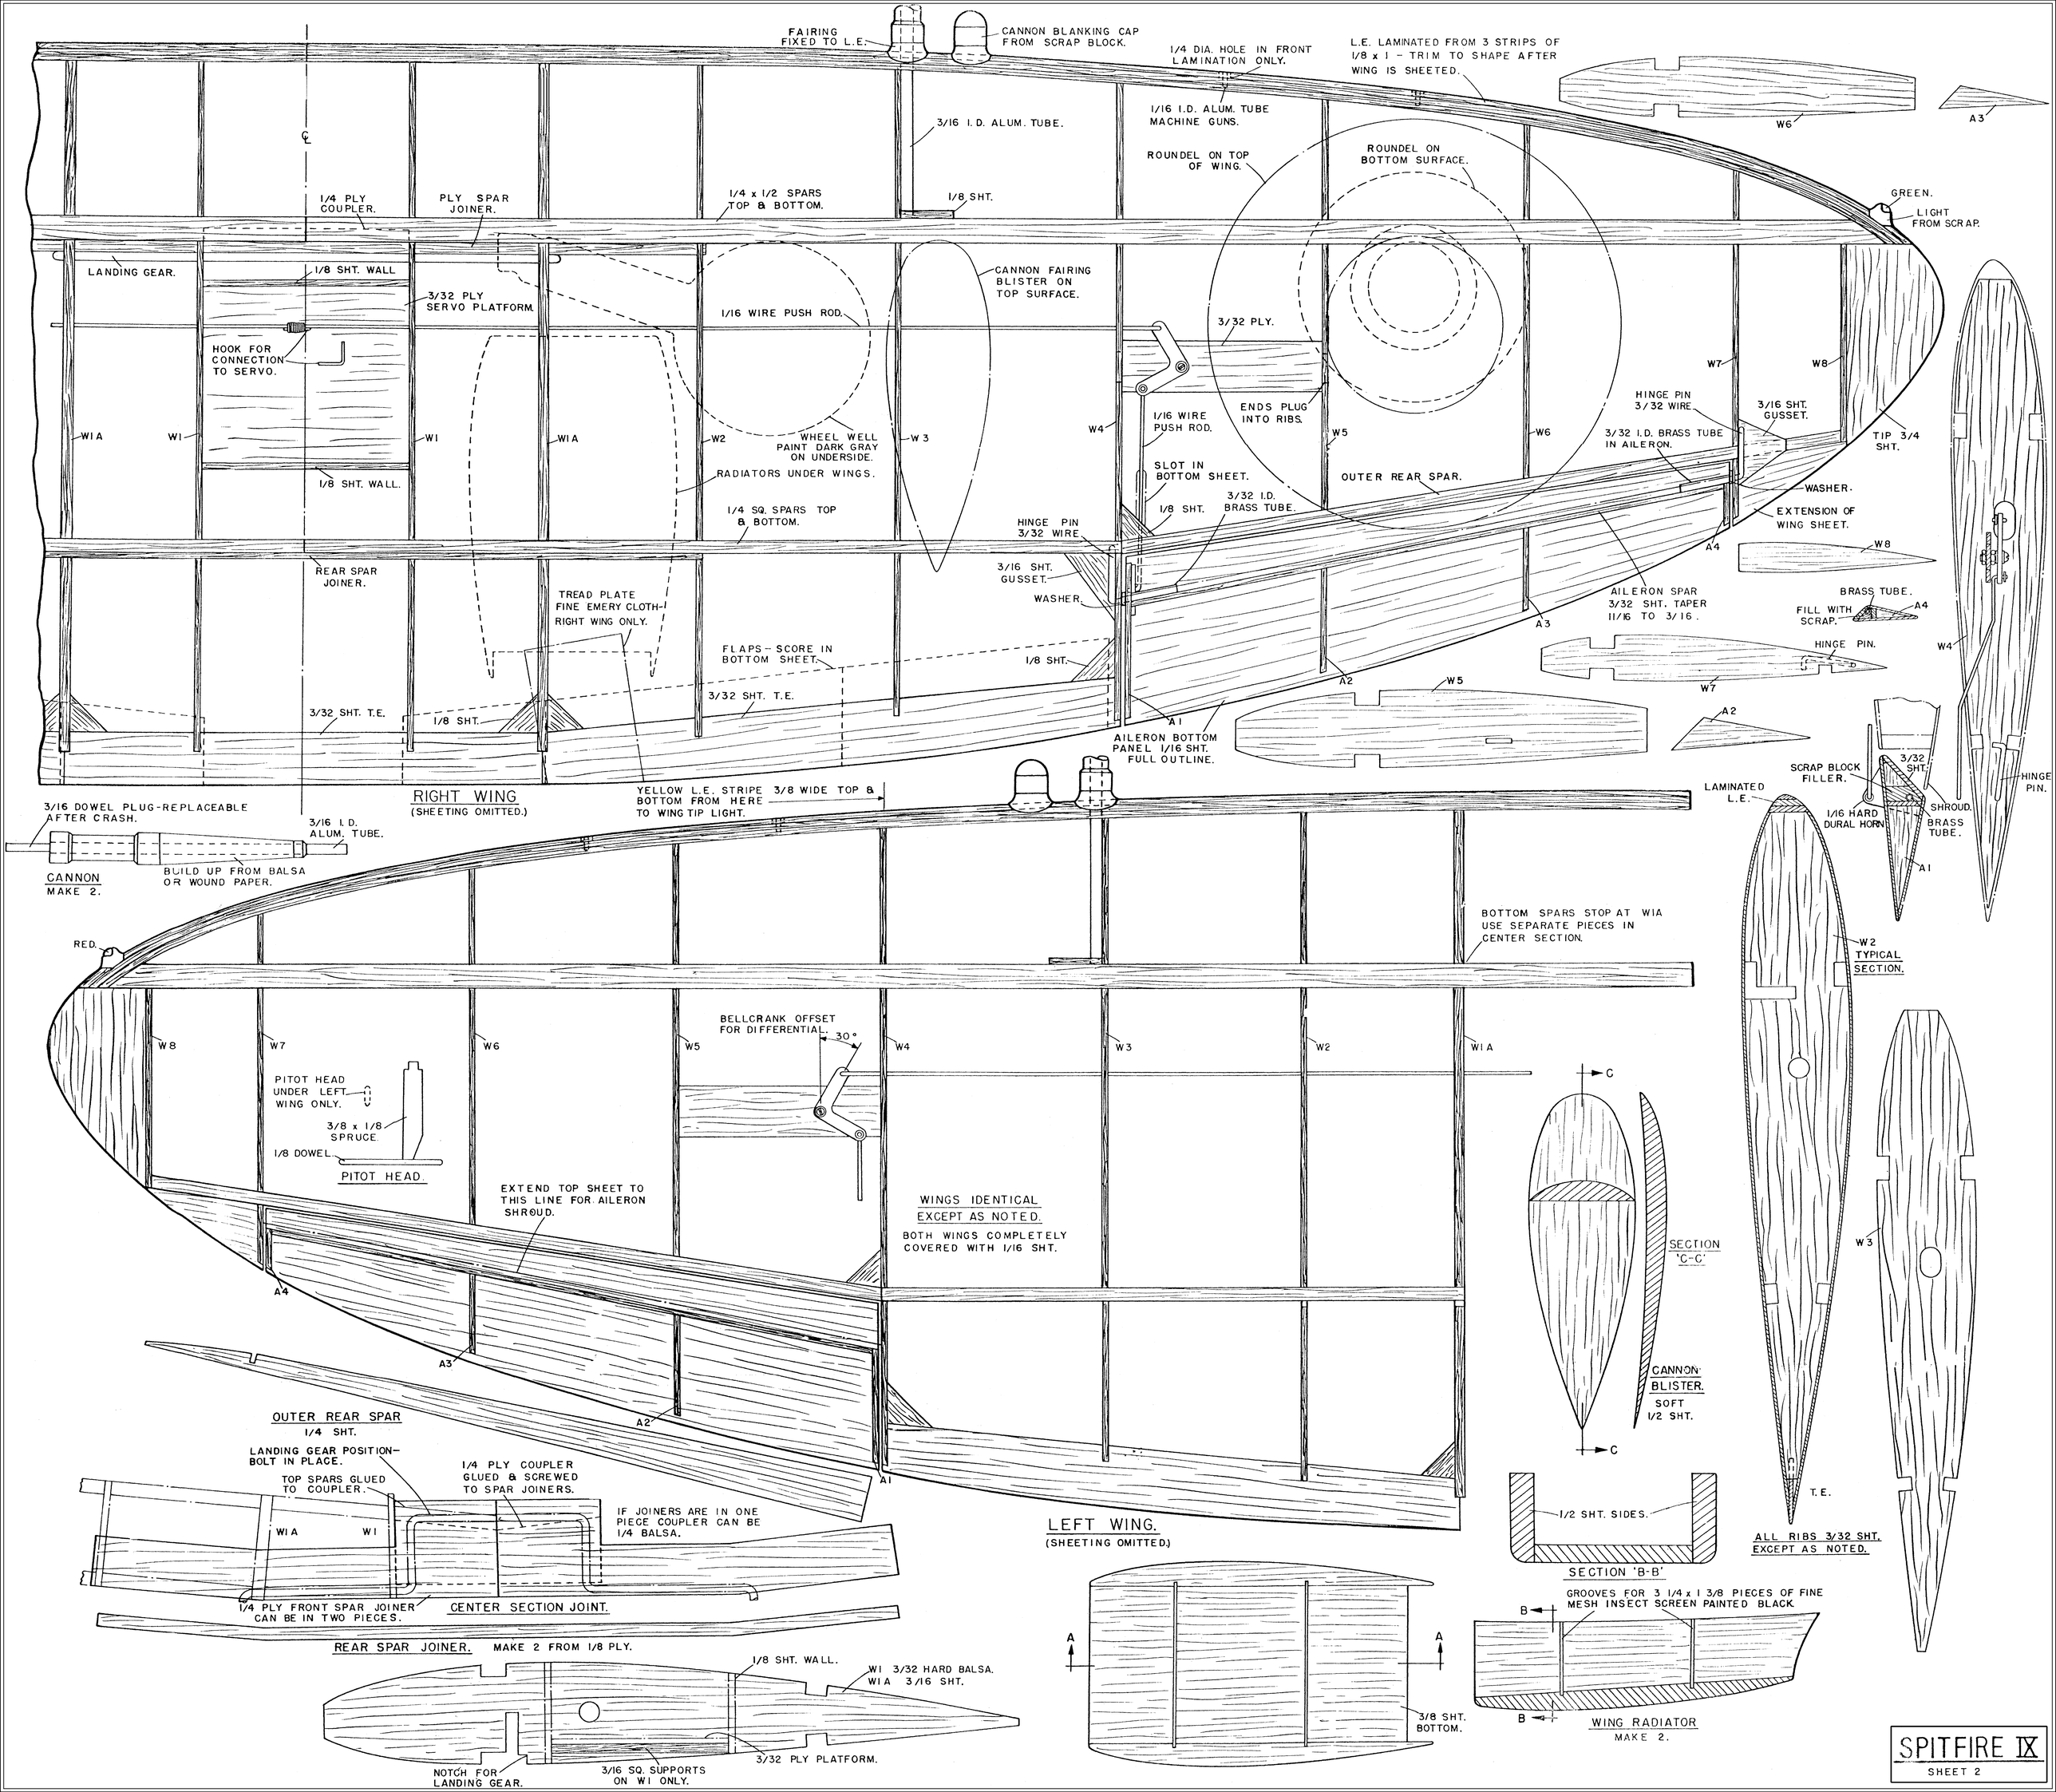

SPITFIRE IX

SHEET 2